


Access control system break glass unit


Break glass pushed (door released)



Break glass normal position (door locked)



To reset, insert  key and turn clockwise half a turn until the plastic screen clicks into place and the yellow marker is removed.

To reset, insert  key into bottom the unit until the face plate slides down. Then push the face plate back up into place to remove yellow marker.